


POWER GRIP®

INSTALLATION INSTRUCTIONS

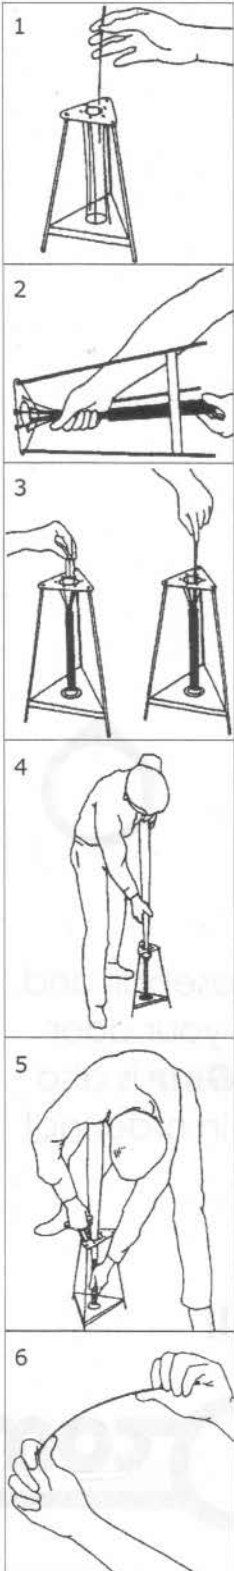

CAUTION: Because installation requires physical exertion, it is required that the installer be in good physical condition.

Step 1 Insert all six springs through the top plate of the bat grip application device slots (see illustration 1). Make sure all six springs top loops are facing outward.

Step 2 Lay the bat grip application device on a horizontal surface and insert the **POWER GRIP** product through the bottom plate hole with the **POWER GRIP** logo end first over all six springs. Push the **POWER GRIP** up all the six springs (see illustration 2) so that the end of the **POWER GRIP** product is at the end of all six springs. If need be push down the springs as all must be level to the top plate of the grip application device.

Step 3 Place the grip application device on the floor in the vertical position (see illustration 3). Insert the six-sided aluminum plug with the center hole up through the top hole of the grip application device plate. Use the wooden dowel and insert it in the center hole of the six-side aluminum plug and push the six-sided aluminum plug down to the bottom and flush with the end of the **POWER GRIP** product and the six springs.

Step 4 Now you're ready to install the **POWER GRIP** onto the bat. The bat handle and knob should be clean, free of any tape or glue. Place the bat knob through the top hole of the grip application device plate against the six springs and put your right hand on the upper part of the bat and your left hand on the lower part of the bat and push down approximately two inches to start (see illustration 4), then hold the **POWER GRIP** product with your left hand and push the bat through with your right hand to the bottom of the bottom plate. The six-sided aluminum plug will fall out of the bottom.

Step 5 Remove all six springs one at a time by holding the **POWER GRIP** product in place with your left hand and also put your left foot on the bottom plate to hold down the grip application device and use the wooden handle with metal hook in your right hand insert the hook into each top loop spring and pull up each spring out. (see illustration 5).

The **POWER GRIP** is now installed onto your bat. You can twist it partly around the bat handle after play keeping the dome edge in line vertically to prolong the life of aluminum bats. When installing onto a wooden bat twist the dome section in line vertically to line up the bat label.

Step 6 Due to the spring's distortion after a few installations, the six springs should be straightened (see illustration 6).